

LED t8 2'9w tube

LED T8 TUBE BALLAST FULLY COMPATIBLE DUAL MODE (DOUBLE ENDED)

FEATURES

Directly Replace 2' Fluorescent T8 Plug and Play
Fully Compatible With Most Electronic Ballasts
Ballast Factor- Low Ballast Factor lumens per watt 130
Ballast Factor- High Ballast Factor lumens per watt 180
Fully functional by-passing existing ballast in the circuit
Certificates: UL Type A (1993) & B (1598c) /cUL, DLC
Instant on, no flicker or buzz


TECHNICAL CHARACTERISTICS

COLOR TEMPERATURE	3000K, 4000K, 5000K
INPUT VOLTAGE	100-277V AC
DIRECT WIRE LUMEN EFFICIENCY	140 LM/W
LUMEN EFFICIENCY	140 LM/W
CONNECTORS	G13
LENS	FROSTED, CLEAR
CRI	Ra>80
PF	>0.95
BEAM ANGLE	150°
L70 LIFE	PROJECTED 100,000 HOURS
WARRANTY	5 YEARS

ORDER INFORMATION							
SERIES	LENGTH (FT)	WATTAGE	VOLTAGE U=100-277V	LENS C=CLEAR F=FROSTED	KELVIN 50 = 5000K		
CPS-T8-	2-	9W-	UL-	C-	40		
				F-	50		
EXAMPLE: CPS-T8-2-9W-UL-F-50							



Net Weight: 0.3 kg / pc

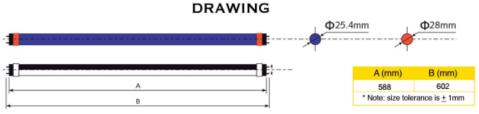



Notice: This product is compatible with over 90% ballast on the market, CPS LED Lighting highly recommends buyers to test the compatibility on site before ordering by large volume.



LED DUAL MODE TUBE LIGHT

PHOTOMETRICS

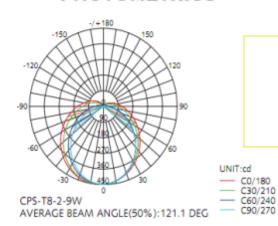


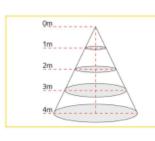

LUX CHART

Model#	Height	Average Lux (lx)	Light range (dia.)
CPS-T8-2-9W	1M	530	270cm
CPS-T8-2-9W	2M	133	539cm
CPS-T8-2-9W	зм	59	809cm
CPS-T8-2-9W	4M	33	1078cm


PACKAGING						
	SIZE	QTY/ CARTON	NET WEIGHT/ CARTON			
OUTER BOX	645*215*270 MM	35 PCS	12.0 KG			

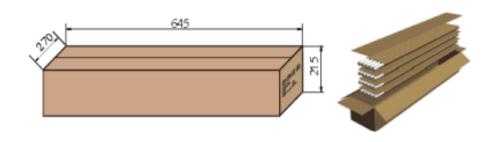




Installation Diagrams

Scenario 1: Electronics Ballast Circuit

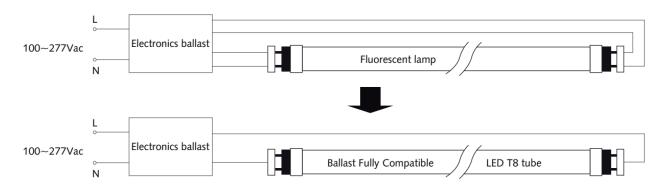

Scenario 2: By pass existing ballast in the circuit *Works with shunted or unshunted lampholders.

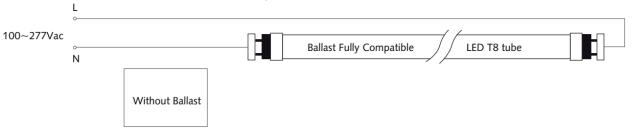

Installation:

Turn power off.

replace with a new lamp.

When installing any CPS led tube light, please do not install from the center of the tube.

For proper seating and lamp safety, the LED lamp is required to be installed by holding each end of the tube caps and rotating the lamp into the lamp holder on each end.

Please make sure the lamp is seated correctly in the lamp holder for proper contact between the lamp pins and the lamp holder.

Not installing the lamp as directed could lead to improper seating, lamp failure and possible fire.

Once installed properly turn power back on and make sure there is good contact on all lamps. Please remove the lamp if there is any buzzing, blinking, or the lamp will not turn on and