




# UVC-19 DISINFECTION

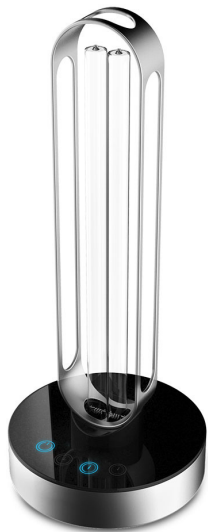

## **APPLICATIONS:**

PUBLIC HOSPITAL AREAS  
BATHROOMS  
RESTAURANTS  
OFFICE BUILDINGS  
LOBBIES

## **PACKAGING INFORMATION:**

### **BOX:**

22.5\*22.0\*47.5 CM

### **CARTON SIZE:**

69.0\*48.0\*50.0 CM

### **QUANTITY:**

6 PCS/ CARTON

## **STERI-LAMP CPS-UVC-19-SL-500**

### **PRODUCT SPECIFICATIONS**

POWER: 38W

MATERIAL: METAL

PRODUCT SIZE (MM): 180\*180\*420  
(7.1\*7.1\*16.5 IN)

WORKING TEMPERATURE: 20~80°C (68~176°F)

IRRITATION ANGLE: 360°

WAVELENGTH: UVC 253.9 NM

INPUT VOLTAGE: 110~220V

LIFE SPAN (HRS): 3000

WARRANTY: 12 MONTHS

MOTION DETECTIVE RANGE: 3 METERS

### **TIMER OPTIONS:**


15 MIN - SUITABLE FOR SMALL SPACES (BATHROOMS,  
KITCHENS, SMALL OFFICE)  
30 MIN - LESS THAN 430 SQ FT  
60 MIN - MORE THAN 430 SQ FT

### **PRODUCT BACKGROUND**

THIS PRODUCT DISINFECTS OBJECTS AND SURFACES DIRECTLY EXPOSED TO THE UV LIGHT. UV LIGHT IS ABLE TO DESTROY THE DNA OF GERMS, VIRUSES, BACTERIA, FUNGI, MOLDS, AND MANY OTHER HARMFUL POLLUTANTS TO CONTROL THE SPREAD. SAFETY FEATURES LIKE THE MOTION DETECTING SENSOR PREVENT PEOPLE/PETS FROM THE UV LIGHT. THIS DEVICE IS MEANT TO BE USED AS AN ADJUNCT TO CURRENT CLEANING PRACTICES, NOT REPLACING THEM.



# UVC-19 DISINFECTION

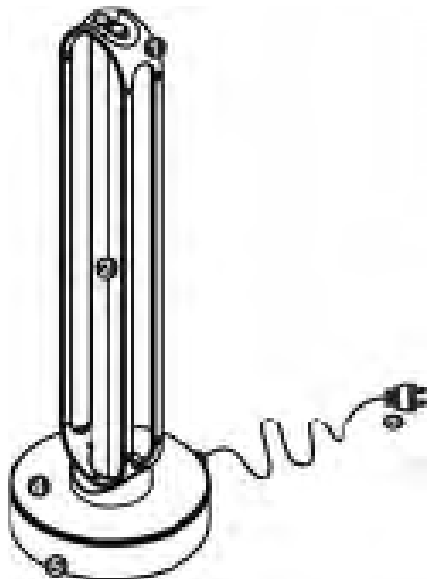

## NAME OF PARTS

1. LAMP SHADE
2. UV LAMP
3. POWER PLUG
4. TOUCH BUTTON
5. BASE

**IF THERE IS A DEFECT WITH THE LAMP PLEASE CONTACT CPS LED FOR INFORMATION ON REPLACEMENT OPTIONS.**

**CPS LED LIGHTING  
WWW.CPSLED.COM  
843-407-6803  
SALES@CPSLED.COM**

## SAFETY PRECAUTIONS

- DO NOT LOOK AT THE ULTRAVIOLET LIGHT SOURCE DIRECTLY. SHOULD NOT BE ON WHEN PEOPLE, ANIMALS, OR PLANTS ARE IN THE ROOM.
- IF LOOKED AT DIRECTLY UV CAN CAUSE STIGMATA, TIRED EYES, OR CONJUNCTIVE IRRITATION.
- DO NOT RECOMMEND USE IF THE TEMPERATURE IS BELOW 20°C/ 68°F OR OVER 40°C/ 104°F.
- KEEP DUST AND SPRAY AWAY FROM THE BULB.
- KEEP LAMP 3 FT AWAY FROM CLOTH FOR DISINFECTION.
- YOU MIGHT FIND SOME WHITE DUST OR SMALL CRYSTAL INSIDE THE BULB TUBE AFTER THE LAMP HAS BEEN USED FOR SEVERAL TIMES, THIS SITUATION IS COMMON. DOES NOT INFLUENCE THE FUNCTION.

## PROBLEM SOLVING

### **PROBLEM:**

THE LAMP WILL NOT TURN ON.

### **SOLUTION:**

MAKE SURE THE GLASS BULB HAS CLICKED INTO THE BASE OF THE LAMP. NEXT, CHECK FOR ANY MOVEMENT SOURCES IN THE ROOM THAT COULD PREVENT THE LAMP FROM STARTING.

### **PROBLEM:**

THE PRODUCT WORKS BUT REMOTE IS NOT.

### **SOLUTION:**

CHANGE THE BATTERIES.

**\*\* PLEASE NOTE: THESE PRODUCTS ARE NOT INTENDED TO DISINFECT MEDICAL DEVICES.**

**\*\*UV DISINFECTION WILL REDUCE THE NUMBER OF PATHOGENS BUT NOT ELIMINATE THEM COMPLETELY.**

The information and recommendations contained in this publication are based upon data collected by CPS LED Lighting and are believed to be correct. However, no guarantee or warranty of any kind, expressed or implied, is made with respect to the information contained herein. Specifications and information are subject to change without notice. Although every precaution has been taken in the preparation of this material, CPS LED Lighting assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contain herein.