


UVC-19: STERI-LAMP

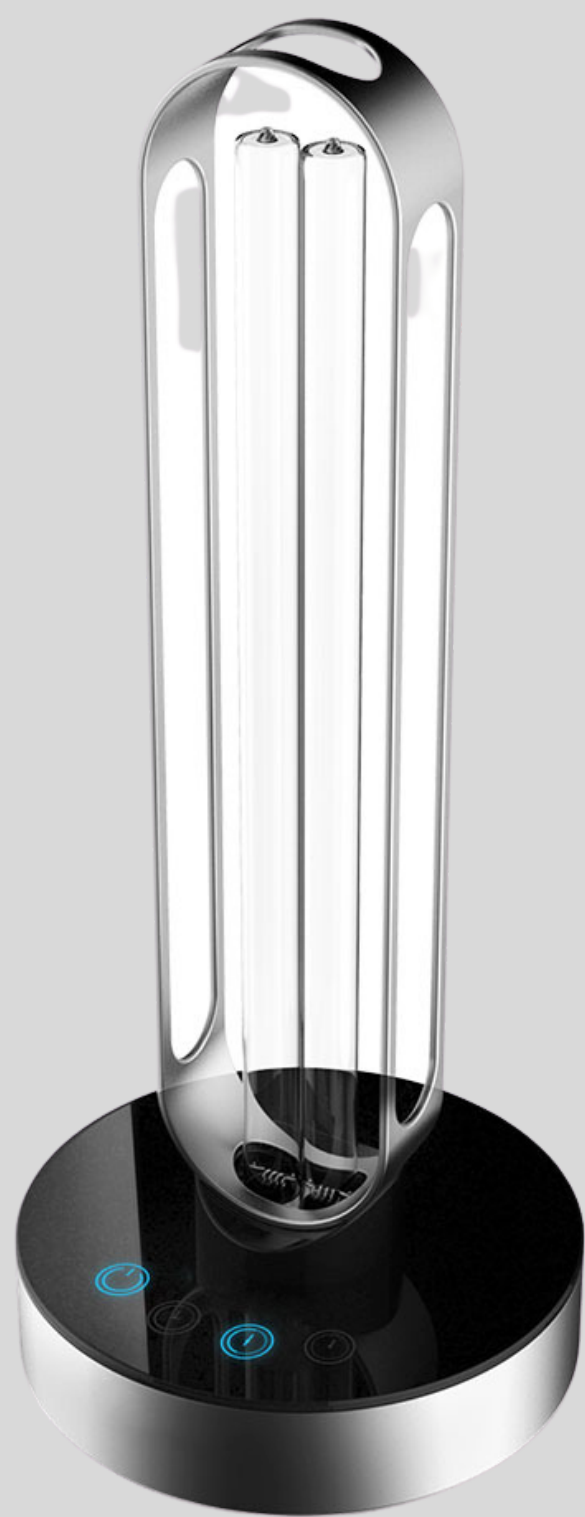

CPS-UVC-19-SL-500



Operating Instructions

- Please check that the bulb is pushed into the base before use or the bulb will not turn on.
- When power is on, the working indicator is red.
- When you press the power button, the working indicator is green.
- Timer indicator is blue.
- During the starting procedure, the green light indicator will flash in 10 seconds, giving the person using it time to leave the room.
- During the sterilization procedure the working indicator is in green, timer is in blue.
- After sterilization, the working indicator will be red.
- The bulb can work for over 8,000 hours

Timer Options:

- 15 minute mode: Suitable for small spaces such as bathrooms, kitchens, closets, office, etc.
- 30 minute mode: Applicable for disinfection less than 40 square meters (430 sq ft) of space.
- 60 minute mode: Applicable for more than 40 square meters (430 sq ft) of space.

** Please check out the videos of this product on our website and youtube channel for more guidance on use.

Safety Features

- This product has a 360 degree human-body detection design, while working, it will automatically stop once it senses a human or animal. Once it senses there is no physical body there anymore it will start working again after a 10 second countdown.
- The detection does not work in the first 30 seconds you start sterilization. After the 10 second warning the operator needs to leave the room. If you have to re-enter, you need to wait 1 minute and then enter so it will sense you.
- It can sense humans and large animals. It will not sense small animals like mice, bugs, etc.

Remote Control Instruction

- Remote control works within 30 meters (98 ft) wireless.
- Remote has the same on/off and timer buttons.
- Once you choose your timer setting, after 10 seconds it will turn on automatically. • The lamp is still what will light up not the remote.

CAUTION

- UV-C light can cause temporary or permanent loss of vision, and temporary acute redness or ulceration (mild to severe sunburn) to exposed skin.
- To prevent exposure, do not operate the device in any application that allows UV-C light to be visible during operation.
- NEVER LOOK DIRECTLY AT THE BULB OR DISINFECTING TARGET ZONE can cause stigmata, tired eyes, or conjunctive irritation.
- DO NOT touch bulb with bare hands.
- Please use appropriate clothing to cover your skin & eyes.
- Keep away from children and pets.
- Do not operate while persons are in the room.
- PRODUCT SAFETY FEATURES:
- STERI-LAMP - 10 SECOND START DELAY, MOTION DETECTION.

The information and recommendations contained in this publication are based upon data collected by CPS LED Lighting and are believed to be correct. However, no guarantee or warranty of any kind, expressed or implied, is made with respect to the information contained herein. Specifications and information are subject to change without notice. Although every precaution has been taken in the preparation of this material, CPS LED Lighting assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contain herein.